

How to Connect WIFI

19-Jan-23


Preface

Freesat V8 box supports built-in wifi,the V7 box does not support built-in wif, you must insert external WIFI.


The following guide can apply V7、 V8 box.

If your box is Freesat V8 series

Step 1: Go to the Network menu and select Network Config, then choose WIFI.

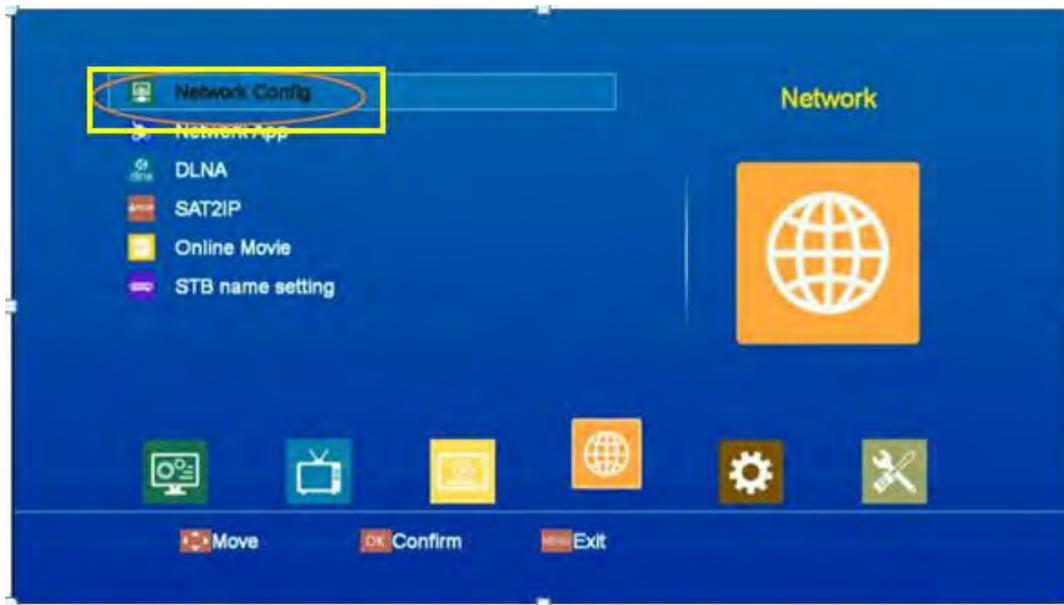


Step 2: Select WiFi manager, then you can see the WiFi signal around you and select the WiFi signal you joined.

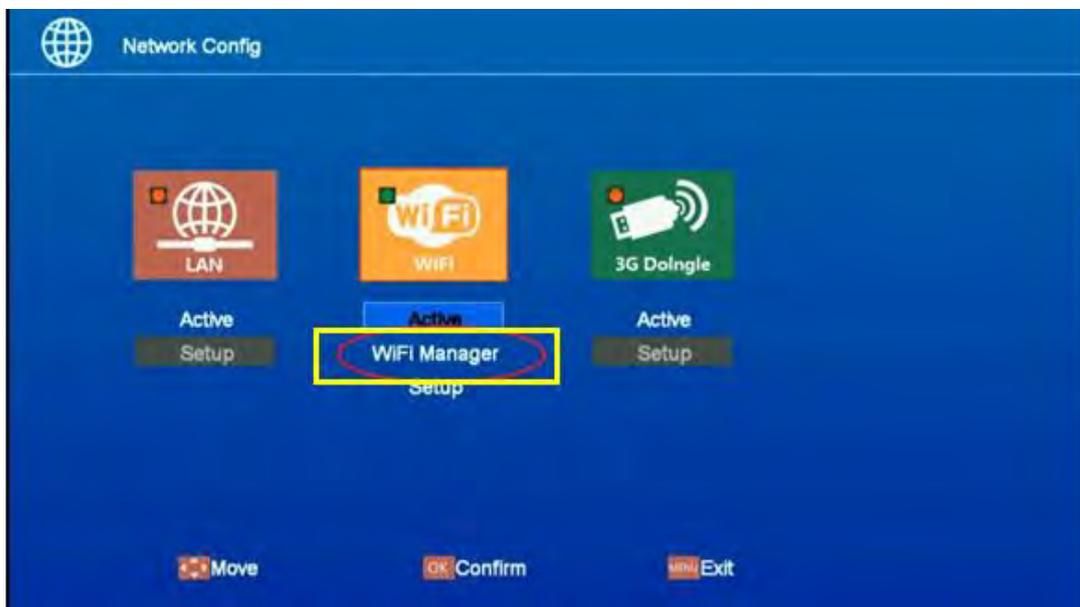




Step3: Click the key field and enter your password. The balls of different colors under the keyboard represent the buttons of the same color on your remote control, Press the yellow button to save.

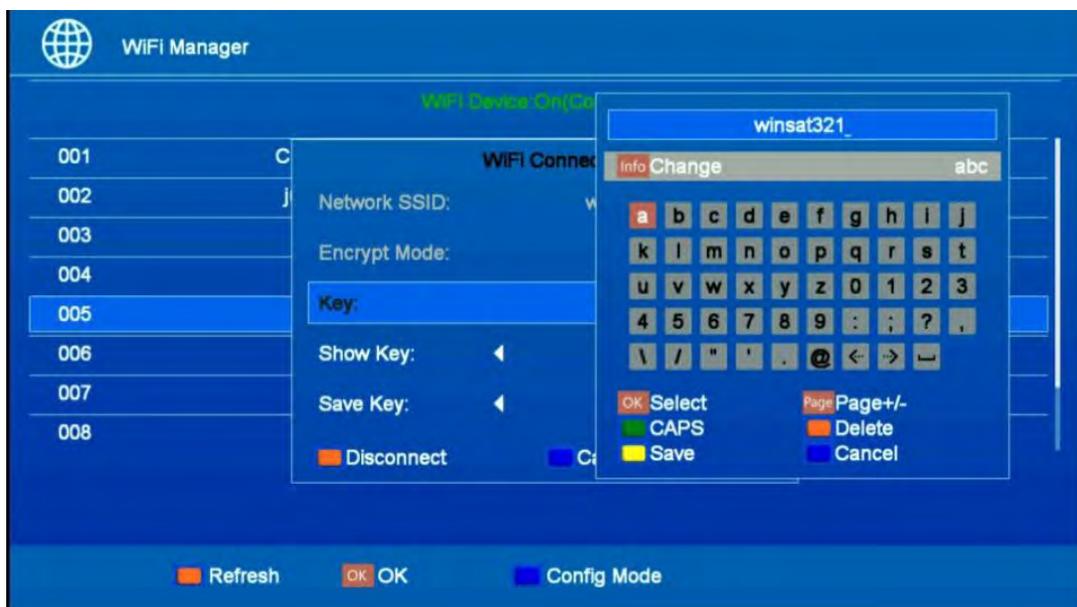


Step4: If your WiFi connection is available, the display will prompt you to connect.

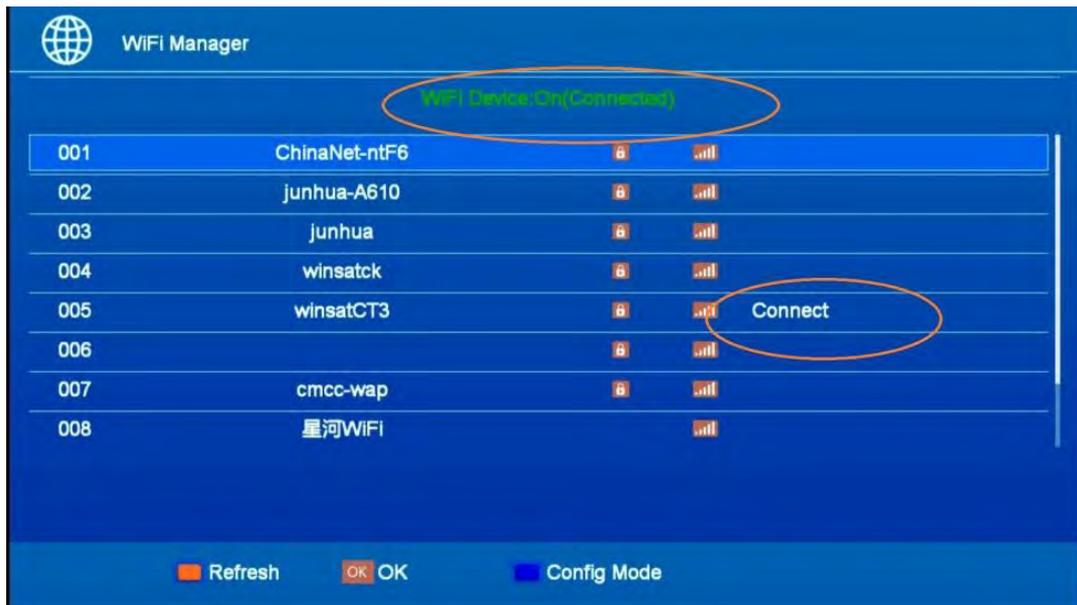

If your box is Freesat V7 series, you must insert external WIFI.

Step 1: Go to the Network menu and select Network Config, then choose WIFI.

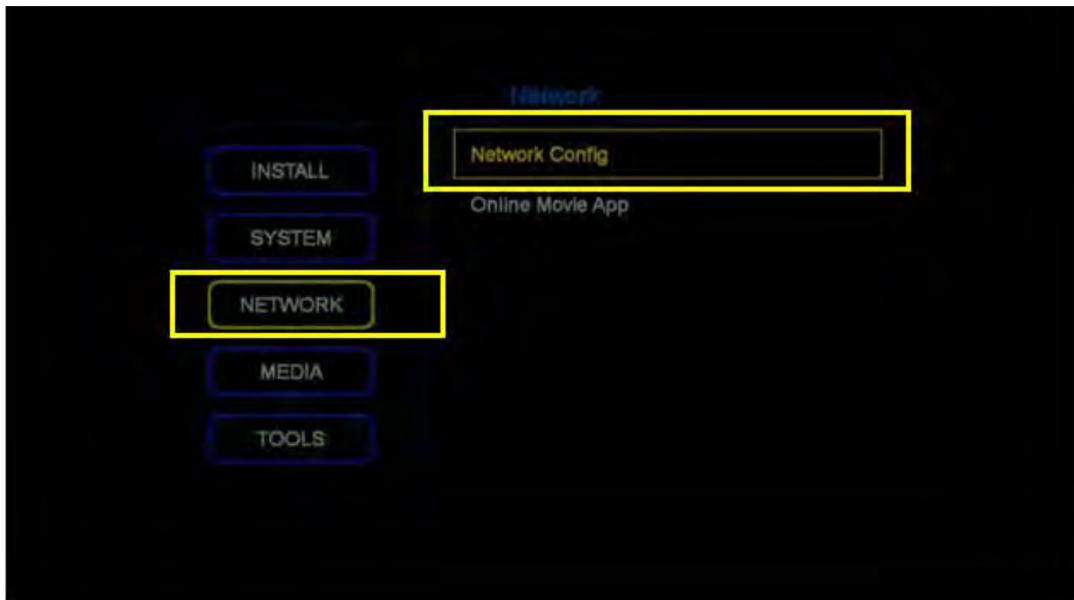

Step 2: Select WiFi manager, then you can see the WiFi signal around you and select the WiFi signal you joined.



Step3: Click the key field and enter your password.

The balls of different colors under the keyboard represent the buttons of the same color on your remote control, Press the yellow button to save.

Step4: If your WiFi connection is available, the display will prompt you to connect.

